

Platen Cleaning


Cleaning the HandPunch platen when needed is important to keep the HandPunch operating. Dirt on the platen may cause disturbance to the camera function.

The best way to clean the platen is to use regular window cleaner and a clean piece of cloth. In addition, the use of Isopropyl Alcohol 99% is OK.

Cleaning the Terminal

Inspect and clean the terminal regularly to maintain optimum performance. Clean the platen, side mirror, reflector, and the window above the platen using a clean cloth dampened with ordinary, non-abrasive window cleaner. Start at the rear corners of the platen and work your way forward.

 **DO NOT SPRAY CLEANING FLUID DIRECTLY INTO OR ON THE TERMINAL.**

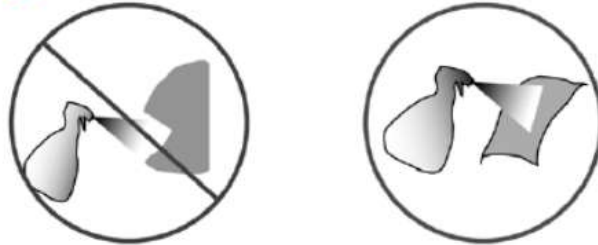

Please avoid using any of these fluids and they may affect the platen ability to reflect light in proper direction:

- Acetone and Acetate
- Methanol and Ethanol

If employees are using hand cream containing Methanol and/or Ethanol it must be used after using the HandPunch in order to protect the platen.